



**On Point**

**PAINT RACK**

---

**ASSEMBLY INSTRUCTIONS**

# PARTS INCLUDED

---

## PAINT RACK

¼"-20 x 1½" Socket Cap Screw **x8**

¼"-20 Nut **x8**

Crossbar **x2**

Uprights **x2**

L-Base **x2**

Shelf for 150ml Cans **x5**

Shelf for 400ml Cans **x1**

Header Support Base **x1**

On Point Header **x1**

Shelf Sticker **x6**

## SAFETY ANCHOR SYSTEM

E-Z Anchor Package **x1**

D-Ring Hanger **x2**

Zip-Tie **x2**, plus 2 extra (**x4** total)

## TOOLS

7/16" Combination Wrench **x1**

3/16" Hex Key **x1**

# THANK YOU

---

for purchasing On Point Paint!




**OnPoint**

sales@onpoint-rc.ca

# STEP 1

## PARTS REQUIRED

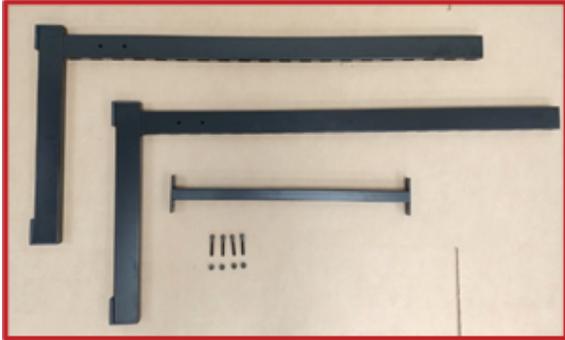

L-Base **x2**  
Crossbar **x1**  
¼"-20 x 1½" Socket Cap Screw **x4**  
¼"-20 Nut **x4**

Figure 1

- 1 Secure the crossbar between the two L-base pieces using 4 socket cap screws and 4 nuts. The nuts should be on the inside of the cross bar. (Figure 2)
- 2 Tighten bolts by hand to keep everything in place. (Figure 3)




Figure 2



Figure 3

## STEP 2

### PARTS REQUIRED

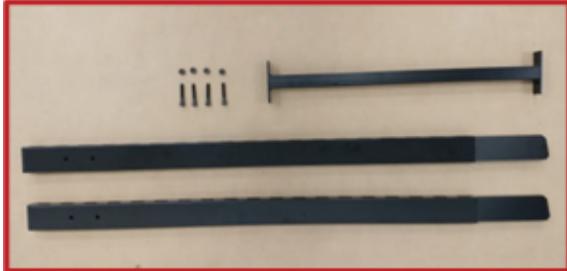

Uprights **x2**  
Crossbar **x1**  
¼"-20 x 1½" Socket Cap Screw **x4**  
¼"-20 Nut **x4**

Figure 4

- 1 Secure the crossbar between the two upright bars using 4 socket cap screws and 4 nuts. The nuts should be on the inside of the cross bar. (Figure 5)
- 2 Tighten bolts by hand to keep everything in place.

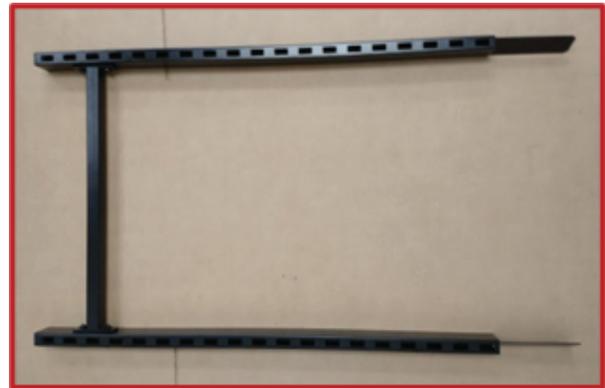


Figure 5



Figure 6

## STEP 3

- 1 Insert the uprights into the L-base bars and adjust until aligned.
- 2 Tighten all the screws/nuts using the tools provided.

# STEP 4

## PARTS REQUIRED



Figure 7

E-Z Anchor Package **x1**  
 D-Ring Hanger **x2**  
 Zip-Tie **x2**

- 1 Using a pencil through the 3rd or 4th hole from the top of the upright, mark the wall where the anchor would line up directly behind the bar. Insert the drywall anchor.
- 2 Using the screw in the E-Z Anchor package, fix the D-Ring hanger to the anchor. (Figure 8)
- 3 Using the Zip-tie, secure the upright to the D-Ring hanger to secure the rack. (Figure 9)



Figure 8



Figure 9

# STEP 5

## PARTS REQUIRED



Figure 10

Header Support Base **x1**  
 On Point Header **x1**

- 1 Insert the header card into the header-card holder and gently push down until it is snug and in place.
- 2 Place the header-card holder on top of the top cross-bar and push down until it is secure.



# STEP 6

## PARTS REQUIRED

Shelf for 400 mL cans **x1** (Figure 11)

Shelf for 150 mL cans **x5** (Figure 11)

Shelf Sticker **x6** (Figure 12)

- 1 Find the top shelf designed for the 400 mL paint cans and set aside to be installed last.
- 2 Insert the top hook from the 5 shelves for the 150ml paint cans from the bottom up, starting at the 9th hole from the bottom. Insert a shelf every 5th hole. *(This leaves enough room to store overstock boxes under the rack.)*
- 3 Finally insert the 400 mL paint can shelf 5 holes above the 5th shelf.
- 4 The shelves may need slight adjustments to level out. Gently push down and/or side-to-side until the bottom of the shelves rest inside the holes below the hooks.
- 5 Very carefully, place the stickers on the appropriate racks, starting with the 400 mL paint sticker on the top rack, and continuing down in numerical order.\*
- 6 Load the paint cans onto the shelves, matching the part number on the can to the description on the sticker. (Figure 14)

**\* Please note: the sticker for the shelf third from the bottom has a replacement sticker on a separate sheet.**



Figure 11



Figure 12



Figure 14